


OPTION 1

If the interface box is intermittent (turning on/off) you will need to join the red and yellow wires together and connect to the accessory live.

Keep away from sources of electrical noise i.e. head unit. If noise continues then you will need to purchase a ground loop isolator (24-020)

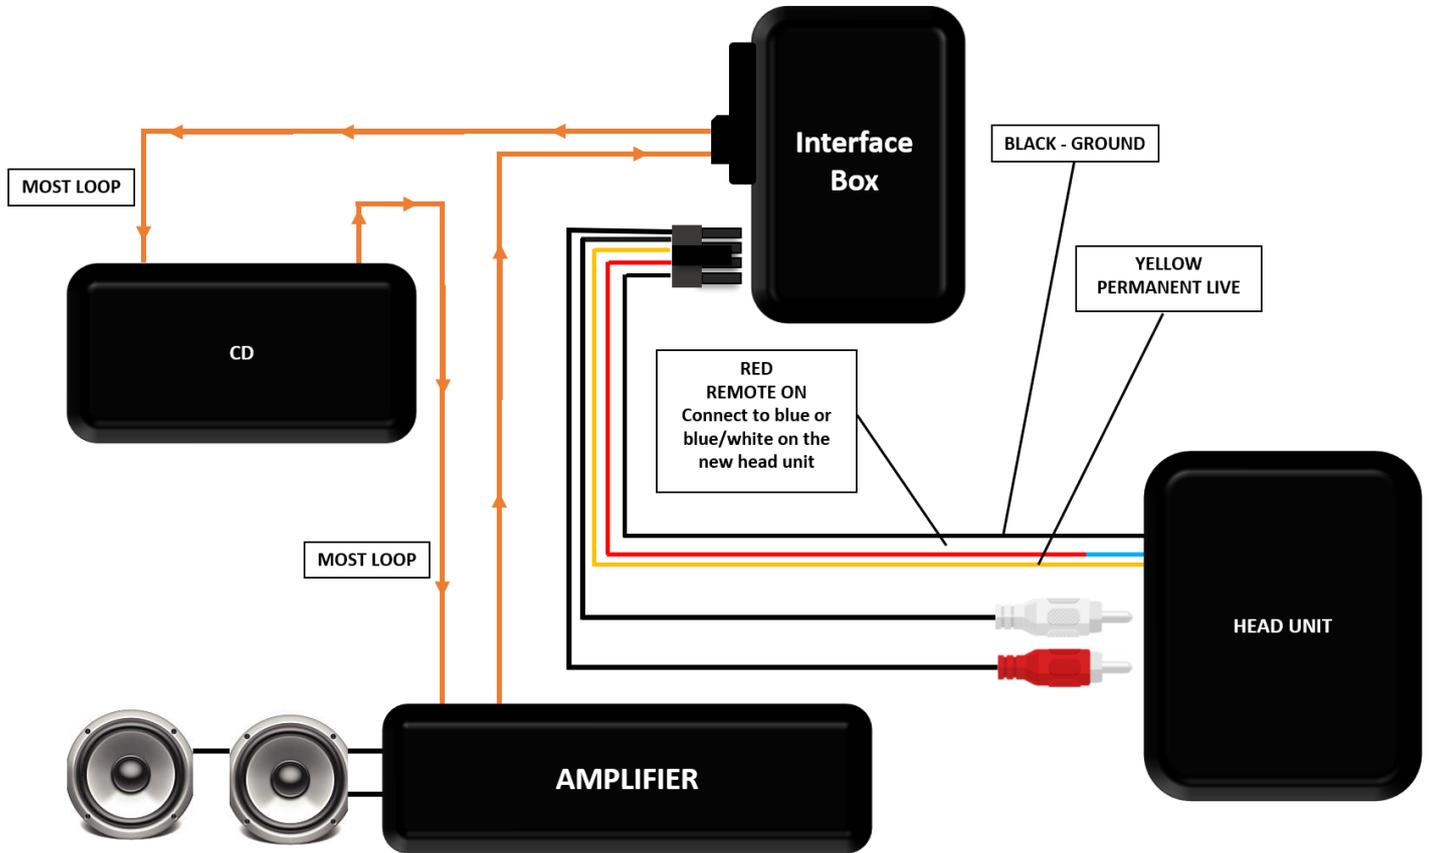

OPTION 2

If the interface does not turn on the OEM amplifier (option 1) then you will need to plug into the amp directly (pictured below)

Keep away from sources of electrical noise i.e. head unit. If noise continues then you will need to purchase a ground loop isolator (24-020)

